


c. *Air Cleaner.* The air cleaner (Fig. 11) which protects the motor from dust and dirt, should be cleaned thoroughly every 256 operating hours, or more often if the power unit is operated under extremely dry conditions. To clean, remove air cleaner wing nut, cover, and lift our filter and bowl. Wash outside of filter element with rag or brush dipped in gasoline. Do not *submerge*. Pour dirty oil out of bowl and wipe it with a clean rag before replacing. Refill air cleaner every 64 operating hours with oil according to instructions in paragraph 8b.



TL-90711

Figure 11. Air cleaner and cylinder head assembly.

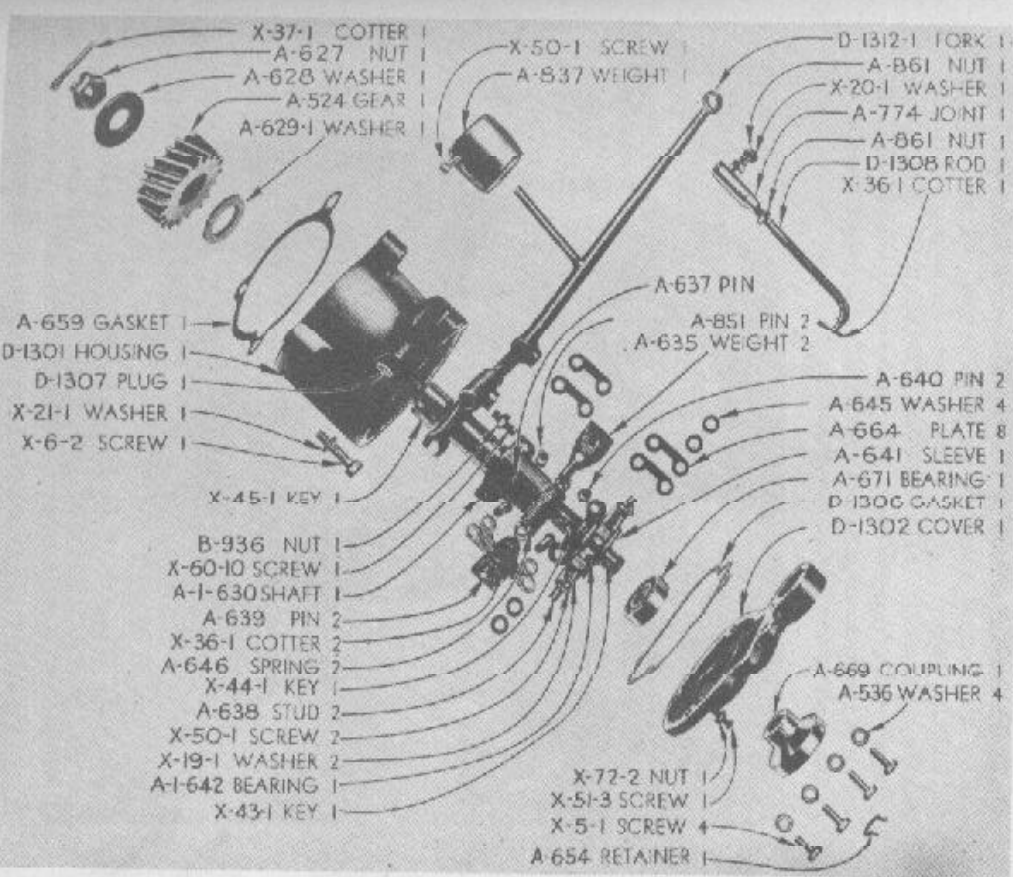

TL-90712

Figure 12. Governor assembly.