

MERCURY
PARTS

- 22 -

Ford Motor Company



CHASSIS PARTS AND PRICE LIST

PART NUMBER	C	LIST PRICE	PART NAME	NO. REQ'D	MODEL	YEAR 19-
92Y 2275	S	1.00	Cable-emergency brake	1	122"	39
99A 2275	S	.75	Cable-emergency assy	1	116"-114"-118"	39-40-1
01Y 2275	F	1.00	Cable-emergency brake rear	2	122"	40-1
91T 2276	F	.12	Bolt-rear cyl.connection	2	101"-122" 1 ton-134"-157"-158"-191" 194"	39-40-1
91T 2277	F	.15	Connection-rear cyl.inlet	2	101"-122" 1 ton-134"-157"-158"-191" 194"	39-40-1
91A 2279	M	.01	Clip-emergency conduit	1	112"-116"	39
91A 2279	M	.01	Clip-emergency brake cable & runn.bd.bracket	1	11A,19A	41
01A 2279	F	.02	Clip-emergency brake conduit	1	112"-116" 122"	40-1
01A 2281	F	.02	20427-32 Bolt-cable clip	1	114"-118"	41
09B 2290	I	.35	Clip-left front brake pipe-LHD	1	112"	40-1
78 2296-A	F	.04	Bushing-brake camshaft	1	09B,19B	40-1
81T 2296	M	.10	Spring-shoe retracting black	4	112"(122" front)	38
09B 2296	B	.25	Spring-shoe return-adjusting side	4	(101"-134"-157"-191"-front & rear 122" rear-1938)(141"-168"-1938-39)	40-1
78 2297-B	F	.05	Spring-brake shoe retracting-anchor pin end	4	09B,19B	40-1
81T 2297	M	.05	Spring-shoe retracting-Orange	4	112" (122" front)	38
			Spring-shoe return operating side	4	(101"-134"-157"-191"-front & rear 122" rear-1938)(141"-168"-1938-39)	

Service Brake Controls

09B 2304	I	5.50	Bracket-front brake camshaft-RH	1	09B,19B	40-1
09B 2305	I	5.50	Bracket-front brake camshaft-LH	1	09B,19B	40-1
09B 2308-A	I	13.25	Adjuster-front brake slack	2	09B,19B	40-1
09B 2310	I	3.85	Bracket-brake camshaft-rear-RH	1	09B,19B	40-1
09B 2311	I	3.85	Bracket-brake camshaft-rear-LH	1	09B,19B	40-1
09B 2314-A	I	21.25	Adjuster-rear brake slack-RH	1	09B,19B	40-1
09B 2315-A	I	21.25	Adjuster-rear brake slack-LH	1	09B,19B	40-1
09B 2316	I	9.25	Shaft-rear brake cam-RH	1	09B,19B	40-1
09B 2317	I	9.25	Shaft-rear brake cam-LH	1	09B,19B	40-1
70 2318-A	I	.70	Spacer-brake air chamber-used with 70-18754-A	1	141"-168"	38-9
70 2318-B	I	1.30	Spacer-brake air chamber-used with 70-18754-B	1	141"-168"	38-9
09B 2320	I	.20	Strap-air tank	4	09B,19B	40-1
09B 2322	I	.20	Strap-air tank	4	09B,19B	40-1
19B 2370	I	.90	Support-air tank	2	19B	41
70 2410	I	6.25	Bracket-brake & clutch transfer shaft	1	141"-168"	38-9
70 2414	I	.35	Rod-brake pedal to cross shaft lever rod	1	141"-168"	38-9
70 2415	I	.35	Rod-clutch pedal to cross shaft	1	141"-168"	38-9
09A 2442	F	.02	Clip-brake retracting spring	1	09A,11A,19A	40-1
40 2454	F	.20	Pad-pedal	2	112"-116"-114"-118"-101",122"-134"- 141"-157"-158"-168"-191"-194"	38-9-40
			34810-82 Lockwasher-pedal pad	2	112"-116"-114"-118"-101"-122"-134"- 141"-157"-158"-168"-191"-194"	38-9-40-1
11A 2454	F	.20	Pad-pedal	2	11A,C,19A,C,19C,101"-122"-134"-141"- 157"-158"-168"-191"-194"	41
68 2455-B	S	2.35	Pedal & bushing No. 17 on shank-LHD	1	112"	38
70 2455	I	4.95	Pedal-brake-assy	1	141"-168"	38-9
81T 2455	I	2.10	Pedal-brake-LHD	1	122"-134"-157" Except C0R	38