



REAR AXLE ASSEMBLY

- | | | | |
|------|-----------------------------------|-------|---------------------------------------|
| 4011 | Rear Axle Housing—Left | 4605 | Drive Shaft |
| 4025 | Differential Housing | 4607 | Drive Shaft Pin |
| 4035 | Housing Gasket | 4616 | Driving Pinion Bearing Cup |
| 4205 | Differential Gear Case—Left | 4621 | Driving Pinion Bearing Cone |
| 4206 | Differential Gear Case—Right | 4625 | Driving Pinion Outboard Bearing |
| 4209 | Gear and Pinion | 4629 | Driving Pinion Pilot Bearing Retainer |
| 4211 | Differential Spider | 4634 | Pinion Bearing Lock Nut |
| 4215 | Differential Pinion | 4636 | Pinion Bearing Nut Lock Washer |
| 4217 | Differential Gear Case Screw | 4637 | Pinion Bearing Thrust Washer |
| 4221 | Differential Gearing Cone | 4645 | Drive Shaft Bearing |
| 4222 | Differential Bearing Cup | 4655 | Drive Shaft Bearing Sleeve |
| 4235 | Rear Axle Shaft | 4658 | Drive Shaft Center Bearing |
| 4243 | Key | 4750 | Rear Radius Rod—Right |
| 4245 | Grease Retainer | 4751 | Rear Radius Rod—Left |
| 4504 | Torque Tube | 17270 | Speedometer Gear and Cap |
| 4507 | Gasket | 17285 | Speedometer Drive Gear |
| 4513 | Universal Joint Housing Inner Cap | 17286 | Speedometer Drive Gear Retainer |
| 4515 | Universal Joint Housing Gasket | 17290 | Speedometer Drive Gear Thrust Washer |
| 4516 | Universal Joint Housing Cap Cork | | |
| 4520 | Universal Joint Housing Outer Cap | | |