



FRONT AXLE ASSEMBLY

- | | | | |
|------|-----------------------------------|------|-------------------------------------|
| 3010 | Front Axle | 3283 | Spindle Connecting Rod Tube |
| 3020 | Front Axle Bumper | 3287 | Spindle Connecting Rod End Clamp |
| 3022 | Front Axle Bumper Base | 3288 | Retainer |
| 3032 | Front Radius Rod Bolt | 3289 | Spindle Connecting Rod End—Right |
| 3033 | Radius Rod and Swivel Bolt | 3290 | Spindle Connecting Rod End—Left |
| 3035 | Ride Stabilizer Bushing Insulator | 3306 | Drag Link |
| 3036 | Radius Rod Nut | 3332 | Seal, Grease Retainer or Dust Cover |
| 3042 | Ride Stabilizer Swivel Boot—Front | 3336 | Grease Retainer or Washer |
| 3043 | Ride Stabilizer Swivel Boot—Rear | 3405 | Front Radius Rod |
| 3044 | Stabilizer Bushing Retainer | 3440 | Radius Rod Ball Cap |
| 3045 | Stabilizer Bushing Retainer Ring | 3446 | Radius Rod Rubber Bushing |
| 3055 | Stabilizer Boot Clamp—Small | 3534 | Stabilizer Swivel |
| 3056 | Stabilizer Boot Clamp—Large | 3535 | Stabilizer and Frame Brackets Bar |
| 3105 | Spindle—Right | 3554 | Stabilizer Bracket |
| 3106 | Spindle—Left | 3555 | Stabilizer Clamp |
| 3110 | Spindle Bushing | 3556 | Stabilizer Bushing |
| 3115 | Spindle Bolt | 3557 | Stabilizer Swivel Washer |
| 3122 | Spindle Bolt Locking Pin | 3558 | Stabilizer Insulator |
| 3123 | Spindle Bolt Bearing | 3566 | Stabilizer Bolt Bushing |
| 3124 | Spindle Bolt Locking Pin Nut | 3570 | Stabilizer Anti-Squeak |
| 3125 | Spindle Washer | 5464 | Spring Shackle Stud |