

FIELD EQUALIZER

starter, the pole pieces should be installed with the short tip in a clockwise direction from the pole piece center line (see illustration).

AUTO-LITE FIELD EQUALIZER FOR MAX+MAW STARTERS

